



DSEGateway® Quick Set Up Guide

The following Quick Set Up Guide is intended to assist in configuring the DSEGateway® and connecting to DSEWebNet®. For further reading please see the relevant DSEGateway® Manual located on the Deep Sea Electronics website www.deepseaelectronics.com


1 STEP ONE: CONNECT AND CONFIGURE THE DSEGATEWAY®

NOTE: Consult the company IT department before making changes to PC network settings.


1. Connect the DSEGateway® Ethernet port directly to the PC Ethernet port using either a 'straight through' or 'crossover' network cable.
2. Configure your PC to be on a fixed IP address (192.168.1.99) as per below ...



3. Using Google Chrome or Internet Explorer, navigate to the address of the DSEGateway® (192.168.1.100) and enter the username and password of the DSEGateway®...

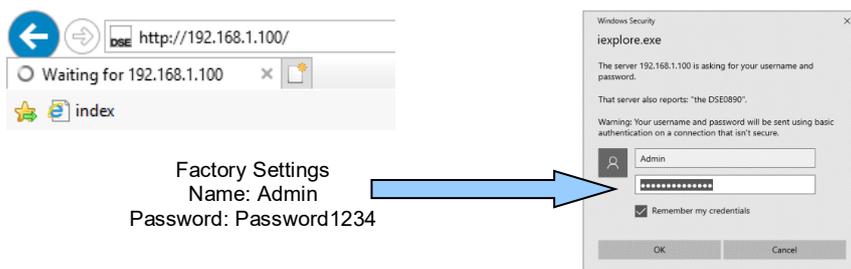

4. It is now possible to view and configure the DSEGateway®. Make a note of the DSEGateway® ID number. This is required when adding the DSEGateway® to DSEWebNet®.

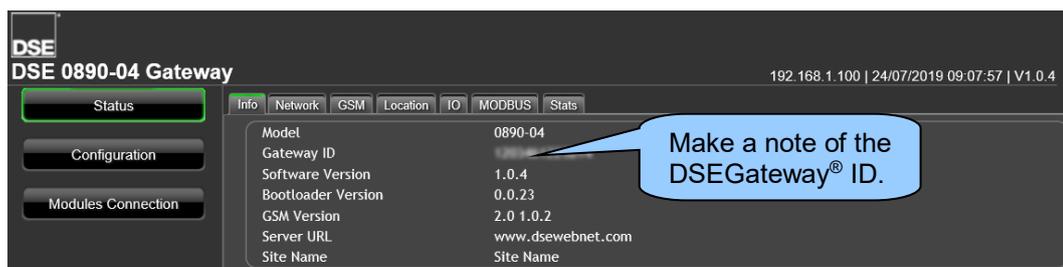


2 STEP TWO: CONNECT THE MODULE

NOTE: DSE advise against the use of USB when used in close proximity to sources of electromagnetic interference.

NOTE: The DSEGateway® is configured to connect to a DSE Module via the USB port (Default). If this is not the communication type to be used please see section entitled *Modules Connection* within the DSEGateway® Operators manual for further details.

Connect the DSEGateway® to the associated DSE modules as shown below. The DSEGateway is configured...

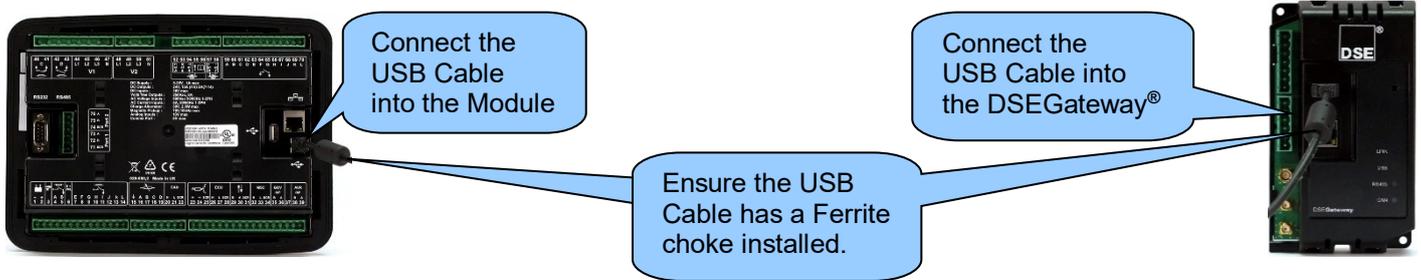


Cable Specification

Description	Specification
USB Cable	USB 2.0 type A to type B screened cable (sometimes known as 'printer cable') with ferrite choke. Max distance 5 m (16 feet).

3 STEP THREE: CONFIGURE THE INTERNET CONNECTION

NOTE: GSM settings are obtainable by contacting the phone network provider or checking the SIM card packaging.


Configure the DSEGateway® to suit the phone or network requirements. These requirements vary according to the SIM Card provider.

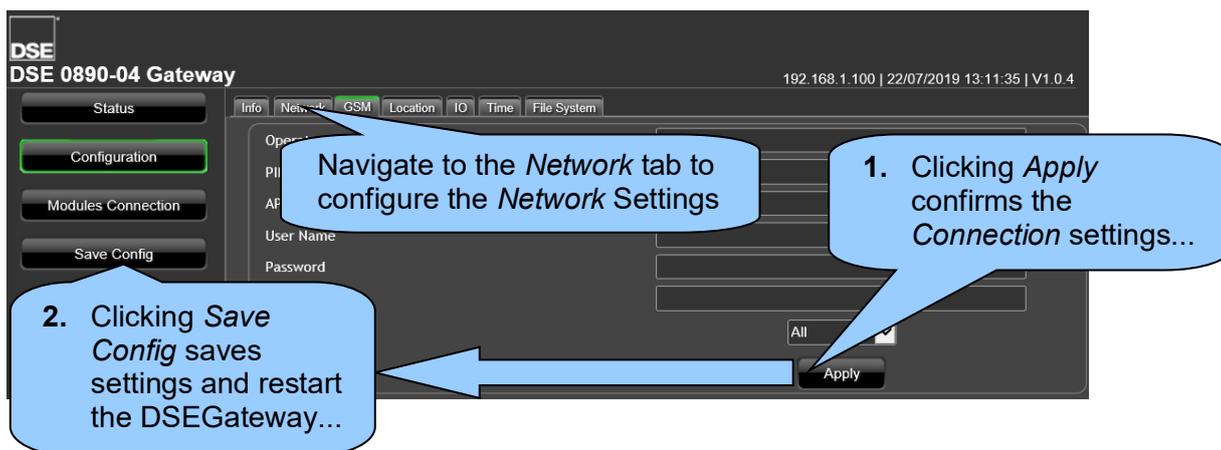

4 STEP FOUR: CHECK CONNECTION

NOTE: The DSEGateway® must have a DSE Module connected when connecting to DSEWebNet® for the first time.

Ensure the DSEGateway® has connected to the DSEWebNet® servers by checking the *Network Advanced* diagnostic tab located in the DSEGateway® browser.

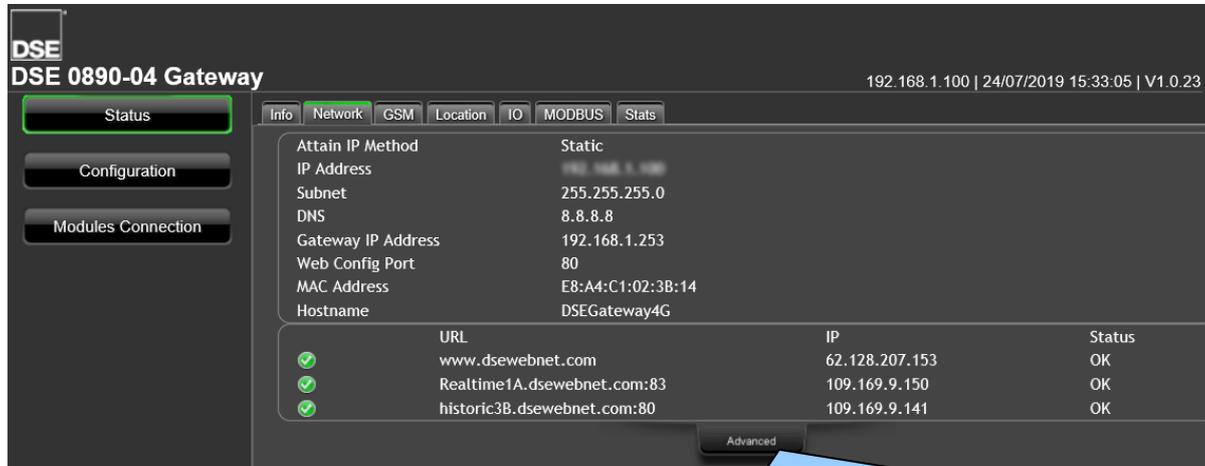

The screenshot shows the DSE Gateway web interface. The title is "DSE 0890-04 Gateway" with the IP address "192.168.1.100" and timestamp "24/07/2019 15:33:05 | V1.0.23". The interface has a sidebar with "Status", "Configuration", and "Modules Connection" buttons. The main content area has tabs for "Info", "Network", "GSM", "Location", "IO", "MODBUS", and "Stats". The "Network" tab is active, showing a table of network settings and a table of DNS servers.

Attain IP Method	Static
IP Address	192.168.1.100
Subnet	255.255.255.0
DNS	8.8.8.8
Gateway IP Address	192.168.1.253
Web Config Port	80
MAC Address	E8:A4:C1:02:3B:14
Hostname	DSEGateway4G

	URL	IP	Status
✓	www.dsewebnet.com	62.128.207.153	OK
✓	Realtime1A.dsewebnet.com:83	109.169.9.150	OK
✓	historic3B.dsewebnet.com:80	109.169.9.141	OK

Click *Advanced* to open and close a diagnostic window for help troubleshooting network connection issues.

Typical Connection Process

Upon connection to the Internet the DSEGateway® attempts to connect to the DSEWebNet® Servers. The process is as follows...

1. Upon completion of *Step Three: Configure The Internet Connection*, the DSEGateway® reboots.
2. For a short time (up to 5 mins), the *LINK* LED remains red.
3. The *LINK* LED illuminates green when connection to the DSEWebNet® server is established.
4. The DSEGateway® configures itself for the connected DSE module, after a short period the USB LED begins to flash.
5. The DSEGateway® and DSE module are now ready to be added to DSEWebNet®.

5 STEP FIVE: ADD THE DSEGateway® TO DSEWEBNET®


NOTE: To access DSEWebNet®, a user account is required. For further details on how Register and Login to DSEWebNet®, refer to DSE Publication: 057-168 DSEWebNet® PC Internet Browser Software Manual.

To add a DSEGateway® to the user's account, the *Gateway USB ID* and *Security Code* are required. This information is located in the DSEGateway® Status Configuration screens.

The DSEGateway® USB ID is located under the *Status Info* section of the DSEGateway® configuration.



The Security Code is located under the *Configuration Info* section of the DSEGateway® configuration.

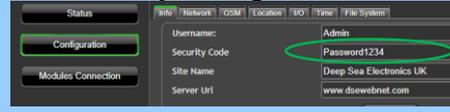

1. Launch a compatible internet browser and navigate to the website: www.dsewebnet.com and login into DSEWebNet®.
2. Click on *Manage Gateways and Modules* located on the top right hand corner of the webpage. The *Devices* section of the *Account Settings* is opened.
3. To add a DSEGateway® to the account, click the *Plus* button located on the top right hand corner of the webpage. The *Add New Gateway* option is opened



4. Enter the DSEGateway® USB ID and Password

New

Gateway USB ID:

Gateway Password:

Click to continue

OK Cancel

5. Select the Module to be added. DSEWebNet® uses the Module's *USB ID*.

Select the DSE Module(s) to be added to the DSEWebNet®.

Enabled	Module USB ID	Name
<input checked="" type="checkbox"/>	213657710	
<input checked="" type="checkbox"/>	213AE33CA	Gen 1
<input checked="" type="checkbox"/>	213AE348A	Gen 2
<input checked="" type="checkbox"/>	67FFFF713D	Gen 3
<input type="checkbox"/>	3194EE0D4	3194EE0D4
<input type="checkbox"/>	31F61C26D	31F61C26D
<input type="checkbox"/>	619D84F73	619D84F73

USB ID of the DSE Module(s) that are, or have been connected to the DSEGateway®

Save the changes that have been made

OK Cancel